

FIRST USE OF THE MACHINE

The ZR24/7 and Magnum Hazers are shipped from the factory without fluid in the system.

When using the machine for the first time, the user will need to prime the system with fluid from the fluid bottle. Do this as follows:

Fit a bottle of Jem/Martin fluid to the unit.

Power up the machine and wait for operating temperature to be reached (display shows ready).

On the ZR24/7 the user must set the **HOT** menu to the correct setting for the fluid in use. See the guidelines in the user guide.

For the Magnum Hazer, the prime function is triggered by setting the fog level control to maximum. Do this until a continuous stream of haze issues from the machine.

For the ZR24/7, the prime function is triggered through the **Pri** menu function. Do this until a continuous stream of haze issues from the machine.

Important:

When shutting down the machine, always allow a 5 minute period with the output at zero, before removing the power.

LONG TERM STORAGE INSTRUCTIONS

When the machine is expected to be out of use for more than 7 days, drain the fluid system. To do this, follow the following sequence of operations: Switch on the machine, and wait for operating temperature to be reached (display shows ready).

Remove the fluid feed pipe from the fluid bottle, and invert it while holding it above the machine.

Prime the machine repeatedly until no more haze is emitted.

Replace the fluid pipe in the bottle, and allow the machine to reheat (very important) for at least 5 minutes.

Remove the power from the machine, and place into storage.